

Instructions

- 1. Unplug the jointer. Pull the guard away from the cutter head, then fasten a clamp between the guard and jointer body to keep the guard from moving back into place and to allow you to access the jointer knives.
- 2. Use the wooden wedge to rotate the cutter head until one knife edge is at the highest point. Place the straightedge on the outfeed table and extend it over the cutter head. Don't let the straightedge touch the infeed table. The knife should just touch the bottom of the straightedge.
- 3. Move the straight edge from one side of the outfeed table to the other to make sure the entire knife edge is at the same height. Repeat with the other knives to ensure they are all at the same height.
- 4. If necessary, turn the outfeed adjustment handle to raise or lower the outfeed table height to match the knife height.
- 5. Move the straightedge so it extends from the outfeed table to the infeed table. Turn the infeed adjustment handle to raise the infeed table until it just touches the straight edge. Slide the depth indicator to "0" if it isn't already there.
- 6. Lower the infeed table one-sixteenth of an inch when jointing hardwoods or one-eighth of an inch when jointing softwoods. Measure the distance between the straightedge and the infeed table to verify that the depth indicator is showing the correct depth.

Read more : http://www.ehow.com/how_5619433_adjust-jointer-table.html