




Through mortise and tenon joint




Corner through mortise and tenon joint




Blind mortise and tenon joint




Corner blind mortise and tenon joint

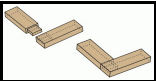



Angled haunched mortise and tenon joint

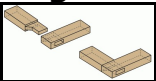

Angled haunched barefaced mortise and tenon joint

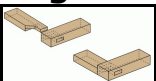


Application of haunched tenon joint to door frame

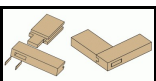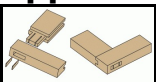


End wedged through tenon and mortise joint




Wedged through tenon and mortise joint

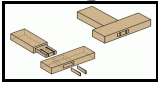


Barefaced blind tenon and mortise joint

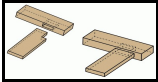


Haunched tenon and mortise joint

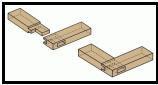


Interlocking tenon and mortise joint for seat rails of chair to leg

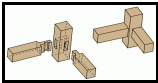


Long and short shouldered tenon and mortise joint

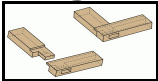


Loose tenon and mortise joint




Open through tenon and mortise joint - Bridle joint

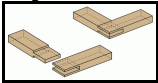


Round tenon and mortise joint

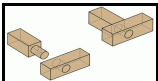


Tenon and mortise joint with mitered face

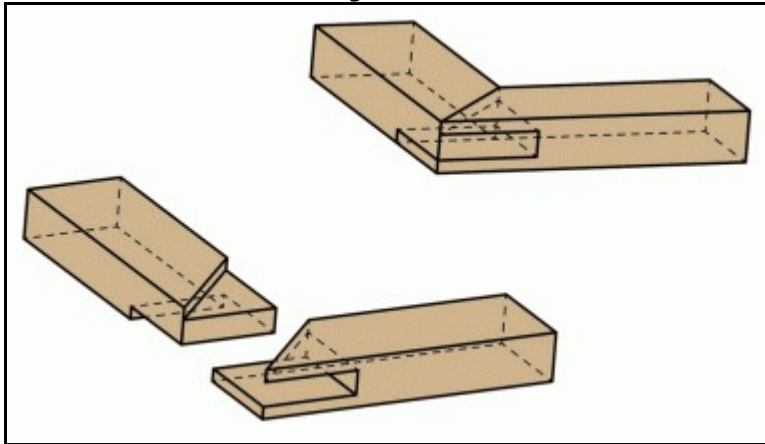


Tusk tenon and mortise joint

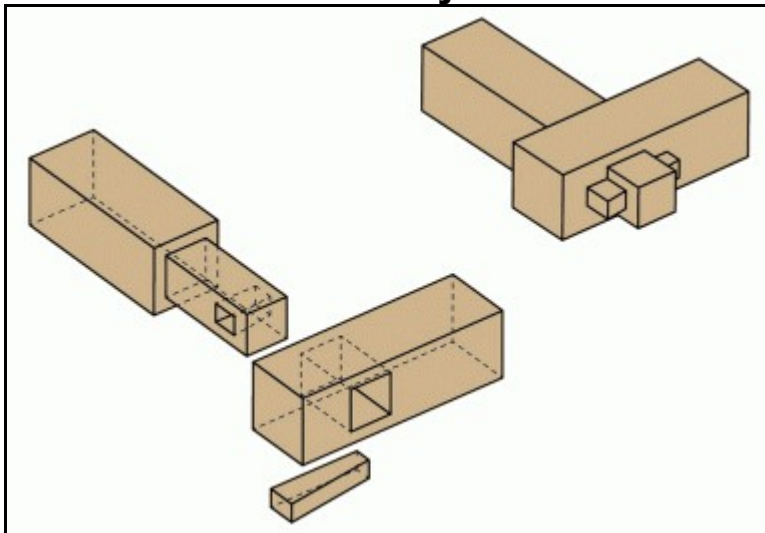


Twin tenon and mortise joint

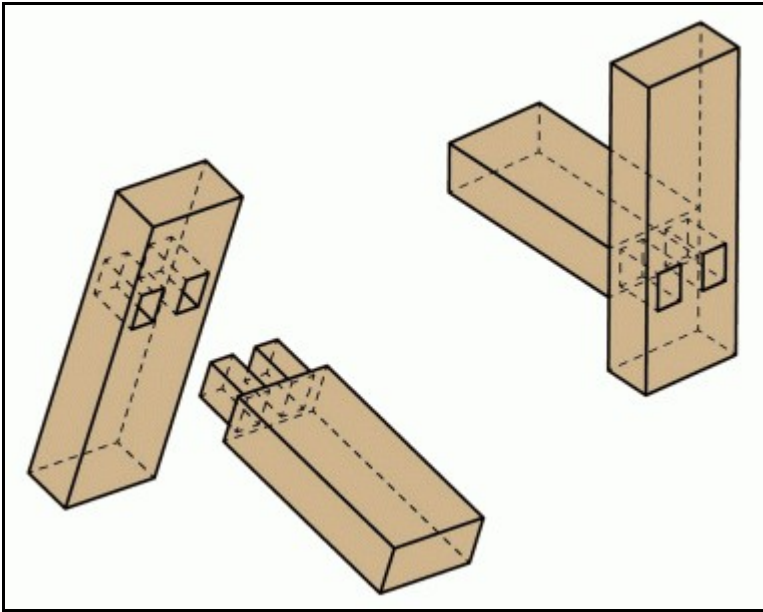


Twin tenon and mortise joint for thick timber

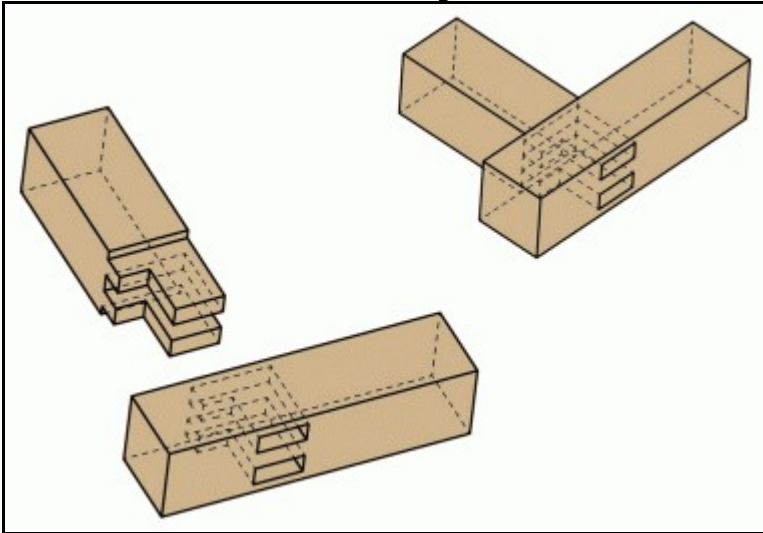


Tenon and mortise joint reinforced with dowel

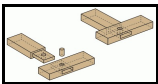

Tenon and mortise joint for fencing

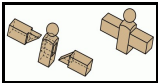

Skewed tenon and mortise joint

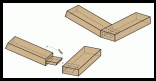

Self wedging tenon and mortise joint

